



FOX INSTALLATION INSTRUCTIONS

- Wear personal protective equipment at all times.
- Use the supplied parts list to check if the kit contains all the parts.
- Thoroughly clean the installation surface prior to installation.
- The product may only be installed by trained personnel.

When drilling or grinding:

- Wear the correct eye and hearing protection at all times.
- Remove all material swarf first, prior to installation.
- Do not use compressed air to blow the swarf away, as this can cause injuries.

Installation kit parts

 Complete installation kit suitable for dry container and cooling unit	 6x M10 Stainless steel locknut (5115073)	 3x M10 x 150 Stainless Steel Screw Studs (5115146) and 3x M10 Countersunk Screw x 100 Stainless Steel Allen (5115222)	 1 x gusset plate (10071096)
	 6x M10 washers (5115043)	 6 x black plastic caps (5127007)	 2 x protective plate
	 6x red plastic caps (5127008)	 1 x door catcher	 4 x shims

Required tools

- Drill
- Angle grinder
- Plastic and steel hammer
- Centre punch
- Socket spanner with 17 mm deep socket
- 1x 17 mm ratchet ring spanner
- 4 mm drill bit
- 11 mm drill bit
- 16 mm drill bit



For the cooling units only:




6 x PVC tubes (5062001)
(make to size)



Always secure nuts with threadlocker.
Loctite 243 - 50 ml
Item no. 1335886

Important information! Read this description carefully prior to starting the installation.

PREPARATION

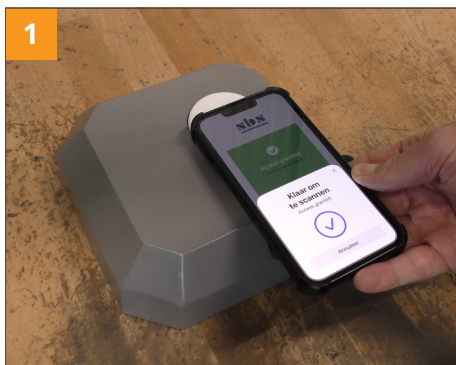

Check whether the app has been installed and works with the Fox.



Decide on the location on the door for the Fox.



Apply the template and measure whether it is neatly aligned.

INSTALLATION



Mark out the drilling location.



Drill the holes using the 6 mm drill bit.



Drill holes using the 12 mm drill bit.



For Plywood and refrigeration doors, use the PVC tube supplied. This requires drilling 16 mm holes.



Cut the PVC tube to size and slide it into the door.

PLEASE NOTE:

When adjusting,
we recommend using normal
nuts first and only installing the
locking nuts during
final finishing.

RIGHT DOOR



Screw the screw studs into the Fox with threadlocker.



Put the protective plate in place.




Install the Fox on the right door.

LEFT DOOR



Install the door catcher on the left door with the supplied protective plate on the outside and the gusset plate on the inside.

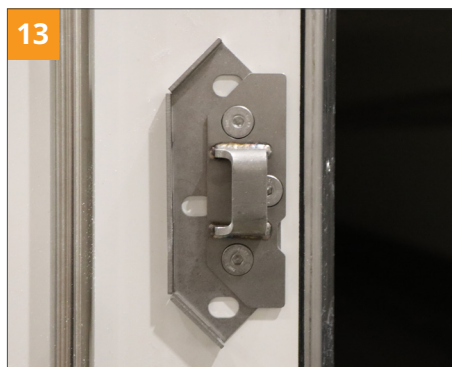

Exterior view.



Interior view.

INSPECTION



Check that the Fox locks properly by opening the door handles.



If not, insert an additional shim.


FINISHING



Shorten the screw studs to the correct length.



Swap the normal nuts for the supplied lock nuts.

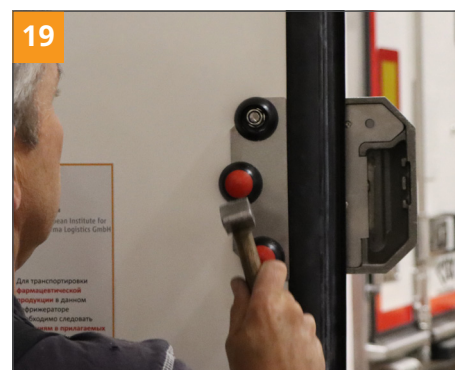

For a neat finish, install the finishing caps.

Drill Jig FOX
CAUTION: Print actual size

