


Pallet truck immobiliser **TRANSBLOC**

For fast and efficient
clamping of pallet trucks

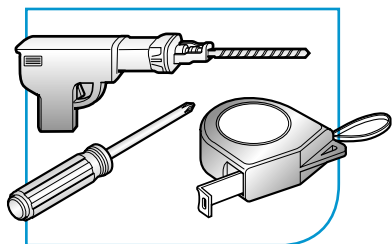

Easy installation.

Installed in just a few minutes.

The Transbloc can be installed very quickly (in less than 20 minutes) and requires no special expertise. A cutout in the floor, 6 screws and a bead of sealant are all that is needed. A cutting template is provided with the installation instructions.

The Transbloc can be adapted to all types of vehicles: in new vehicles or as an after-market accessory.



Semi-automatic.

Fast and efficient operation.

A strong spring coupled with an extruded rubber profile provides enough pressure to secure the pallet truck in position.




Flush-mounted.

Does not hinder the load and leaves the deck smooth.


Transbloc is designed not to hinder loading and unloading operations in the retracted position.

Pallet truck immobiliser TRANSBLOC


OPERATION

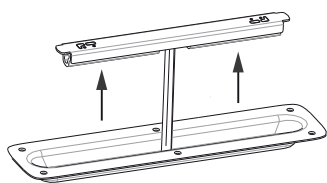


1°) Pull the Transbloc's handle upward.

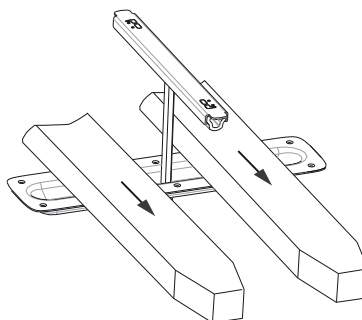


3°) Position the pallet truck under the handle.

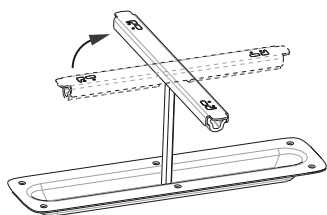

2°) Block the handle in the high position by turning it a quarter turn.

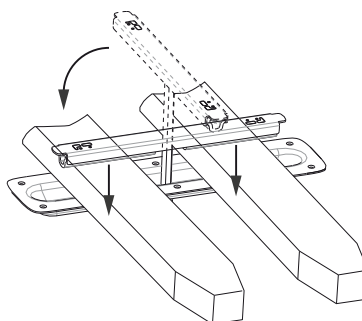

4°) Release the handle onto the pallet truck by pivoting it in the opposite direction. Simply pressing on the end of the handle is all that is required.

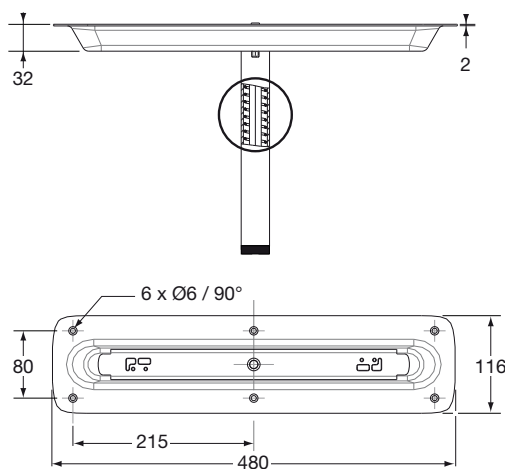

36.43740

Pallet truck immobiliser.

Zinc-plated steel pallet truck immobiliser.

FP 1018-A-EN - DO NOT DISCARD ON PUBLIC ROADS

POMMIER reserves the right, without notice, to change the characteristics, optional equipment, and prices of all the displayed products. This is under no circumstance a contractual document. Forbidden even partial reproduction