

Mounting the Cargo hoop onto the Gas and LF Cargo Bars



170110072


The Cargo Hoop set consists of:

2 aluminum C-profiles.


2 steel holders.

4 small screws and nuts.

2 long screws, nuts and sleeves.

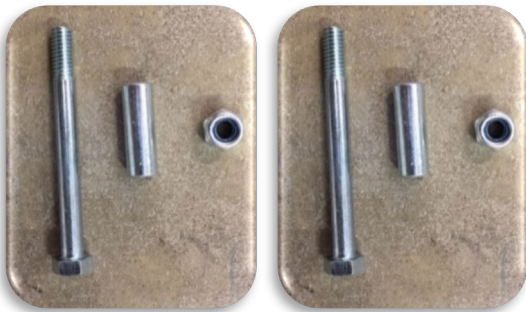

2 long screws, nuts and sleeves.

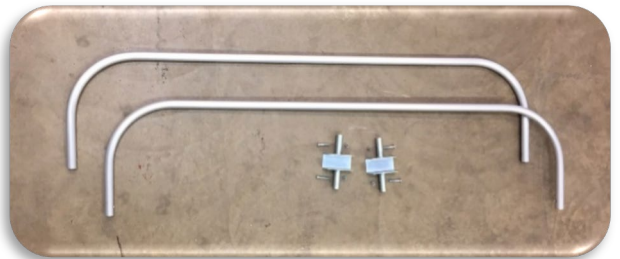

2 aluminum C-profiles.

2 steel holders.


4 small screws and nuts.

170110089

Kit for Cargo Hoop set consists of:

2 brackets.

2 long strong screws.

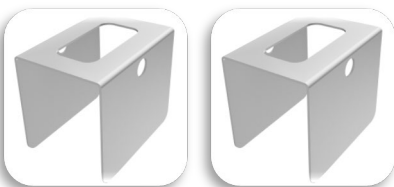

2 brackets.







2 Long strong screws

1: Lay all cargo hoop components on a flat and stable surface to ensure easy access during assembly.


→ 2: Slide the tubes into the steel holders. Make sure the tubes are fully seated and aligned straight.

→ 3: Secure the tubes by inserting the four small screws through the drilled holes and fitting the nuts on the opposite side.
Tighten all screws evenly until the tubes are firmly fixed in place.


Use this here

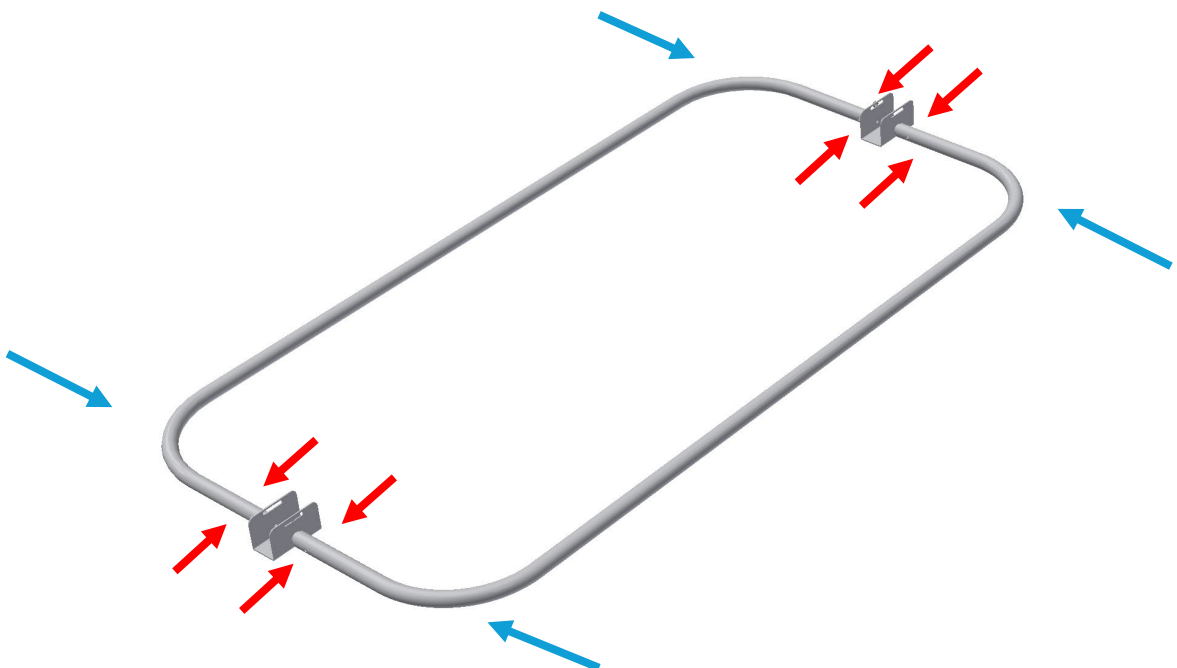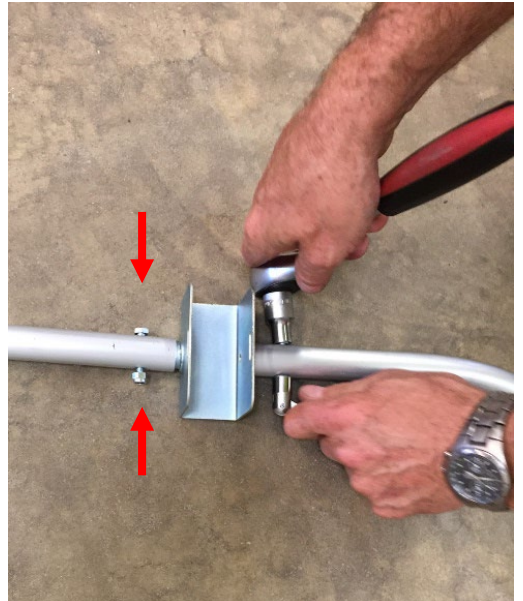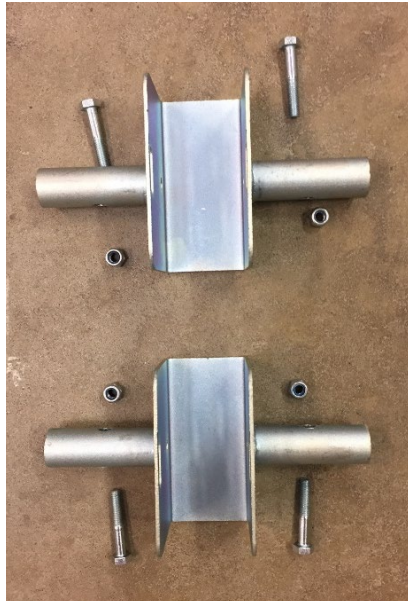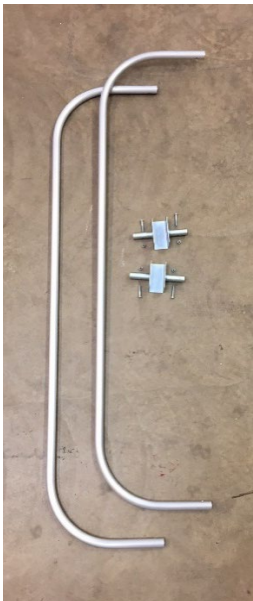

-  1: Place the gas / LF cargo bar into the steel holders.
-  2: Position the brackets inside the steel holders.

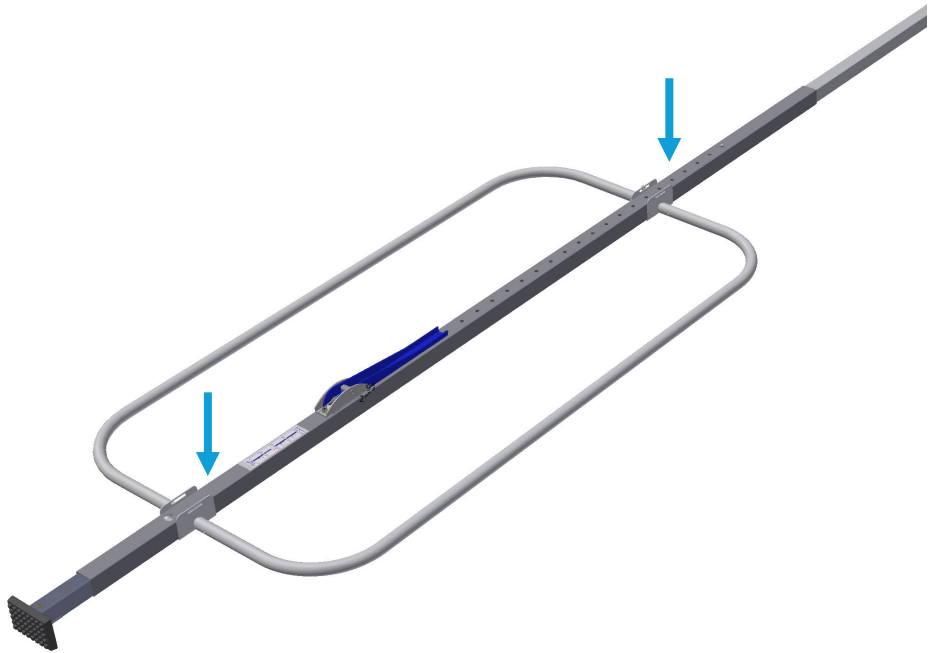

Use this here

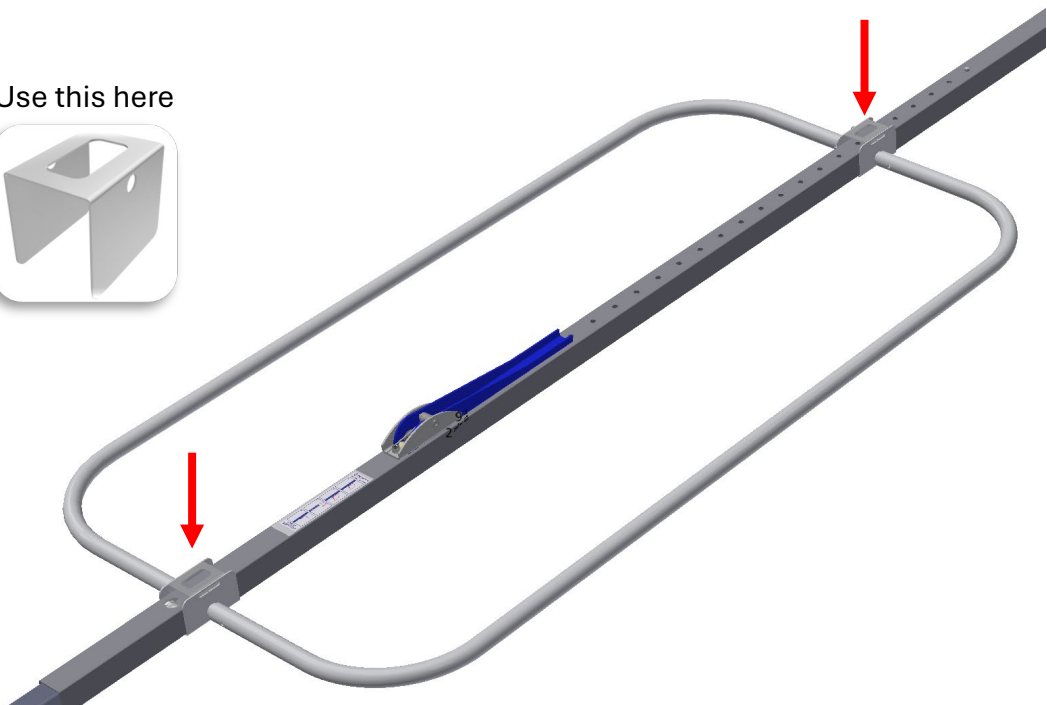

-  1. Place the sleeve in the bracket so that it is centered and held securely.
-  2. Insert the screw through the steel holder, then through the bracket, through the sleeve, out through the opposite bracket, and finally through the other side of the steel holder.
-  3. Tighten the screw until the assembly is firmly secured. The cargo hoop should not be movable or adjustable by hand when properly tightened.

Put aside the long screws that came with 170110072.

Use thees here

